



THE NEXT GENERATION OF
FOLDING TONNEAU COVERS.


Model Specific Install Guide

Toyota Applications

Toyota Tundra 2007-Current
5.5' Bed - FX41008
6.5' Bed - FX41010

1 Hardware Kit Check List

- A. Clamp kit (6)
- B. Star knob (2)
- C. Front Retainer Clamp (2)
- D. Front Mounting Bolts (2)
Lock Washer (2), Flat Washer (2)
- E. Bulkhead Seal (1)

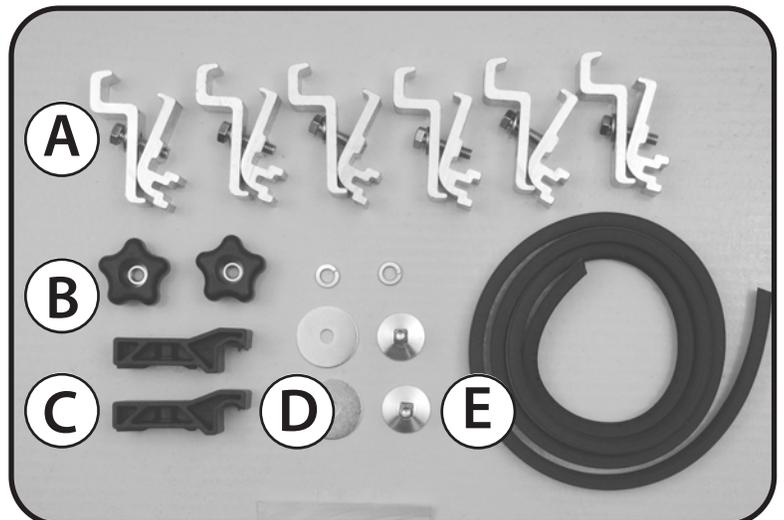

KIT - S



Form # FL71-S
Modified June 2013

For Warranty Issues, Contact UnderCover Directly
(866) 900 8800 www.flex-cover.com

2 Attach Side Mounting Rails





Attach both left and right side rails to the truck bed. The end of the mounting rail with the drain tube fitting will go towards the cab of the truck.

Slide the clamp assembly (3 per side) into the Utility rail, position one front, one center and one rear, Figure 1.

Using three (3) clamps per side attach the rail to the bed, position the clamps adjacent to each of the black rail spacers. Position the side mounting rail flush to 1/8" above the bed rail and hand tighten, Figure 2 & 3. Tighten the clamps using a 1/2" wrench or socket, Photo A.

Note: If you discover your truck will not allow you to position a clamp adjacent to the spacer, simply slide the spacer forward or back as needed.

Install the Bulkhead Seal to the front rail of the truck bed and cut to length.

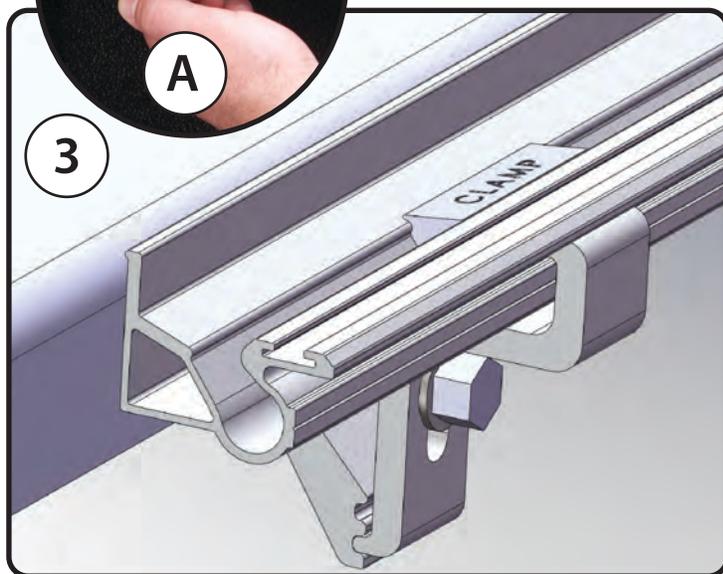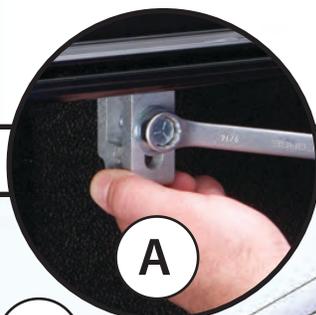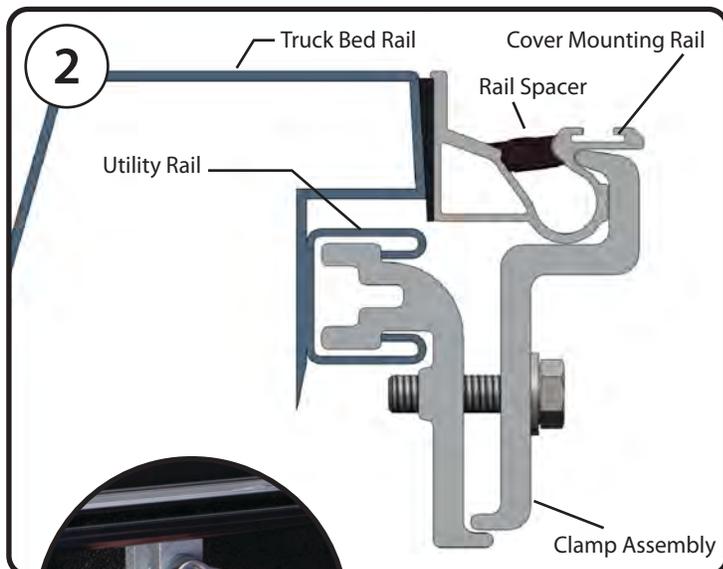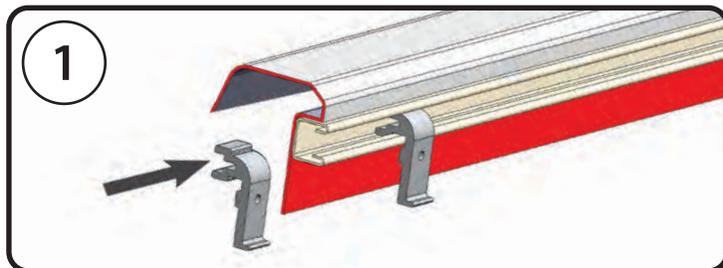

Warning! Do not overtighten the clamp assembly. A torque wrench is not necessary. If preferred, torque is apx 120 inch lbs.



Warning! Clamps must be checked periodically for tightness. Failure to do so could result in damage to you or your property.