




MODEL SPECIFIC GUIDE

Hidden Hinge Version

Model 4066 Toyota Tacoma Std/Ext/Double Cab 6' Long Bed 2005-Current *(with multi-track system)*

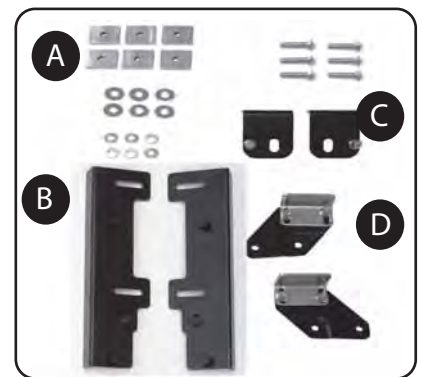

Tacoma Bracket Kit

- A: Mounting Hardware
- B: Front Brackets
- C: Prop Brackets
- D: Rear Brackets




Note: Before beginning install, you must remove the factory Multi-Track tie down cleats. These cleats may be reinstalled after the cover install is complete.



RE: Step 2 on the Quick Start Guide

Remove the end caps from the Multi-Track system. Install the prop mounting brackets. Slightly screw the Multi-Track flat clamps on to the bolt and through the prop mounting bracket. Slide the flat clamp into the Multi-Track system. Position according to the measurement on the reverse side.

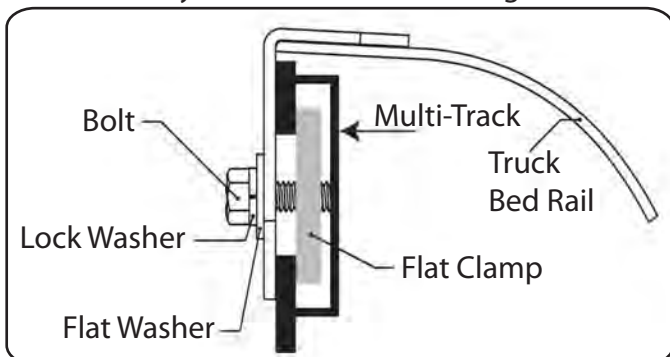

Form # AS4066II
Created March 2012

For Warranty Issues, Contact UnderCover Directly
(866) 900-8800 www.undercoverinfo.com





MODEL SPECIFIC GUIDE Hidden Hinge Version

Model 4066 Toyota Tacoma 6' Long Bed

Continued - RE: Step 2 on the Quick Start Guide


Position the prop mount bracket 51" from the front of the bulkhead to the center of the ball stud. Install the rear brackets using the two bolts nearest the tailgate, close to the top rail of the truck.

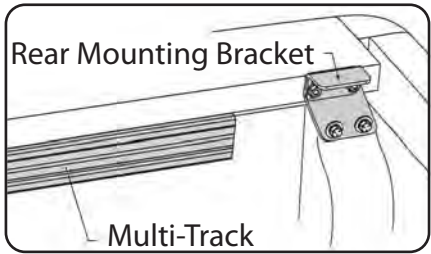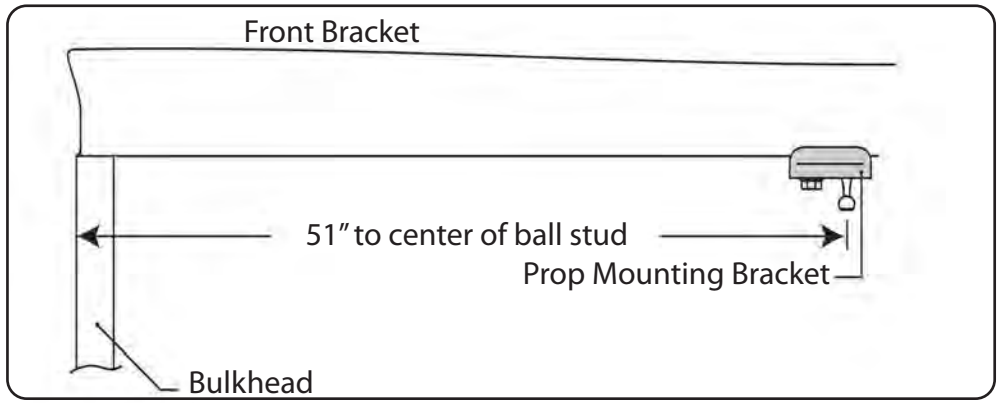

RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is 17 3/8" from the back side of the bulkhead to the end of the bracket. Install using the Multi-Track flat clamp.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

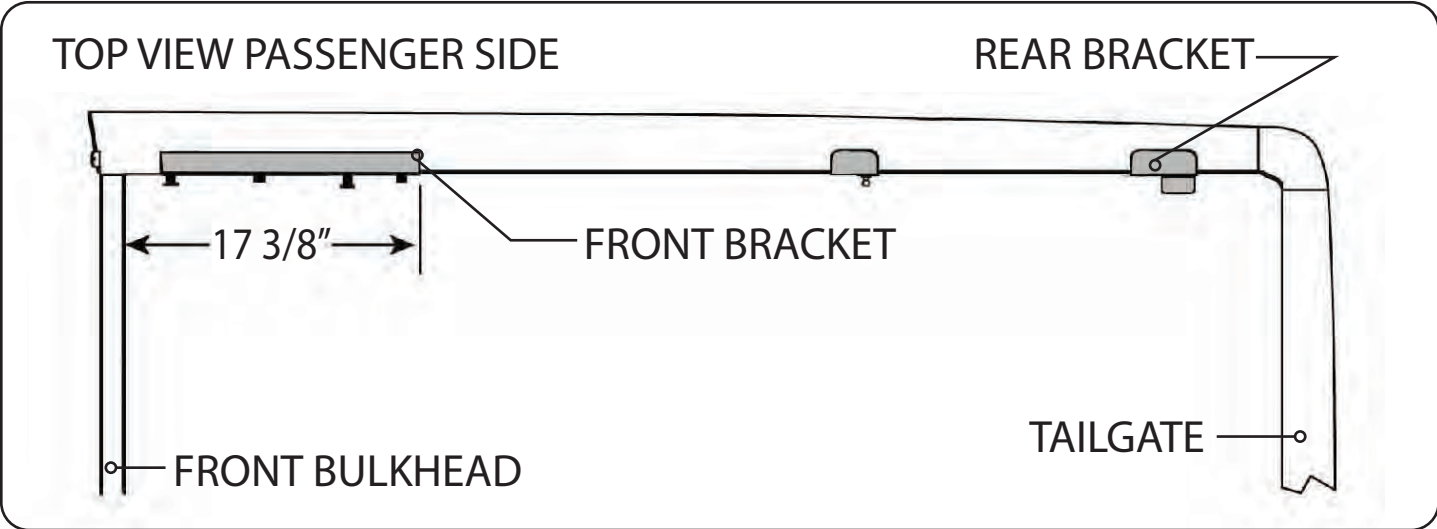

UnderCover, Inc.
 P.O. Box 620
 Rogersville, MO 65742
 (417) 753-8000
 (866) 900-8800

www.undercoverinfo.com
sales@undercoverinfo.com